
SUPERNOUGHT
EXPLODED VIEW

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	004.002.0010	CHAINSTAY PROTECTOR	1
2	001.004.0007	DROPOUT BOLT 5mm HEX	4
3	001.004.0015	DROPOUT NUT 8mm HEX	4
4	001.004.0006 (Alt. 001.004.0003)	27.5 [0] NON-DRIVESIDE DROPOUT (Alt. 29 [0] NON-DRIVESIDE DROPOUT)	1
5	001.004.0004 (Alt. 001.004.0001)	27.5 [0] DRIVESIDE DROPOUT (Alt. 29 [0] DRIVESIDE DROPOUT)	1
6	003.007.0019	M5x20 SOCKET SCREW 5mm HEX	1
7	002.005.0004	M5x1 WASHER 10mm OD	1


ATTENTION: ENSURE SURFACE IS CLEAN AND FREE FROM GREASE!




TORQUE AFTER AXLE IS INTALLED!
SEE PAGE 8 FOR AXLE TORQUE

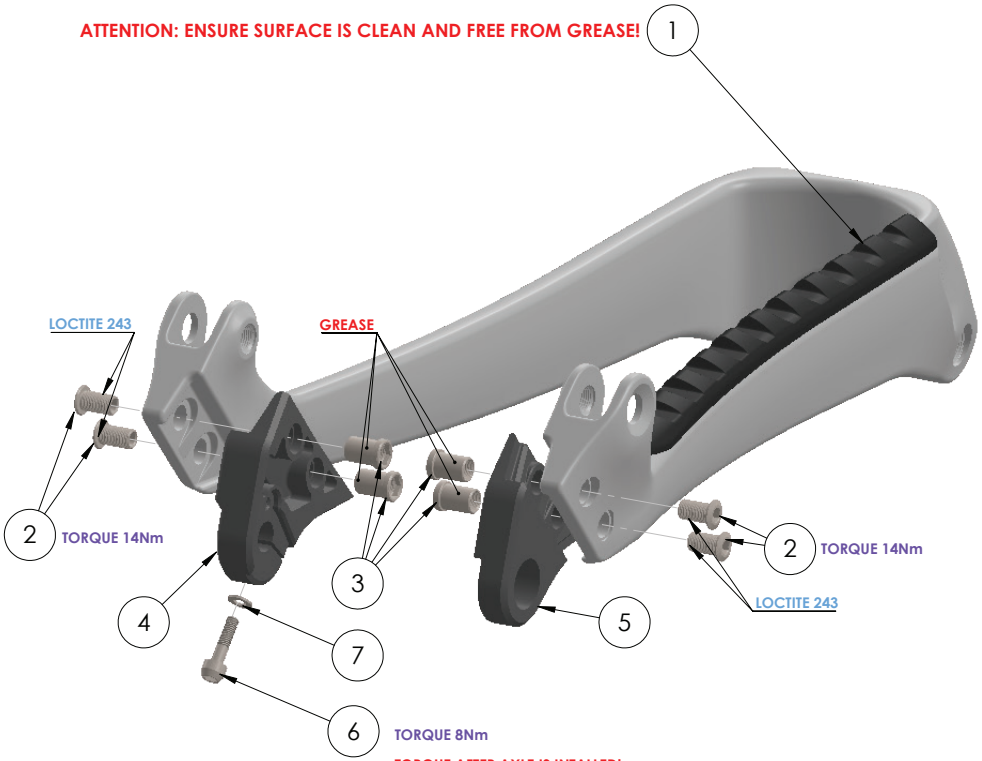


!!! ATTENTION: ENSURE CORRECT ALLIGNMENT!

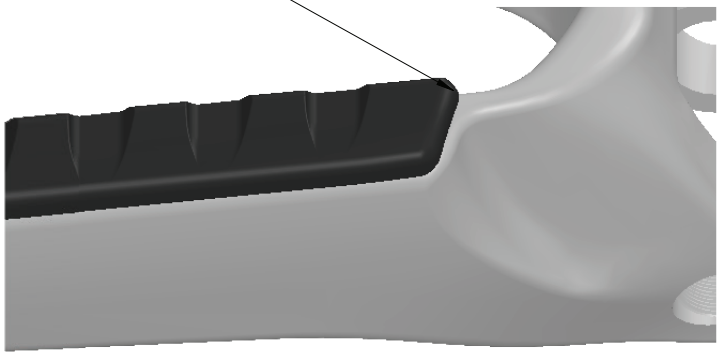

ITEM NO.	PART NO.	DESCRIPTION	QTY
8	005.001.0009	ENDURO 6901 LLU MAX BO BEARING	4
9	005.001.0001	ENDURO 6902 LLU MAX BO BEARING	2
10	004.001.0005	REAR TRIANGLE CABLE PORT RH	1
11	003.007.0013	SEATSTAY CABLE PORT SCREW	1
12	002.004.0016	SPACER 12x1.5	2
13	004.001.0011	P-TYPE CABLE GUIDE	1
14	003.007.0002	ACCESSORY SCREW	1
15	004.002.0012	SEATSTAY PROTECTOR	1

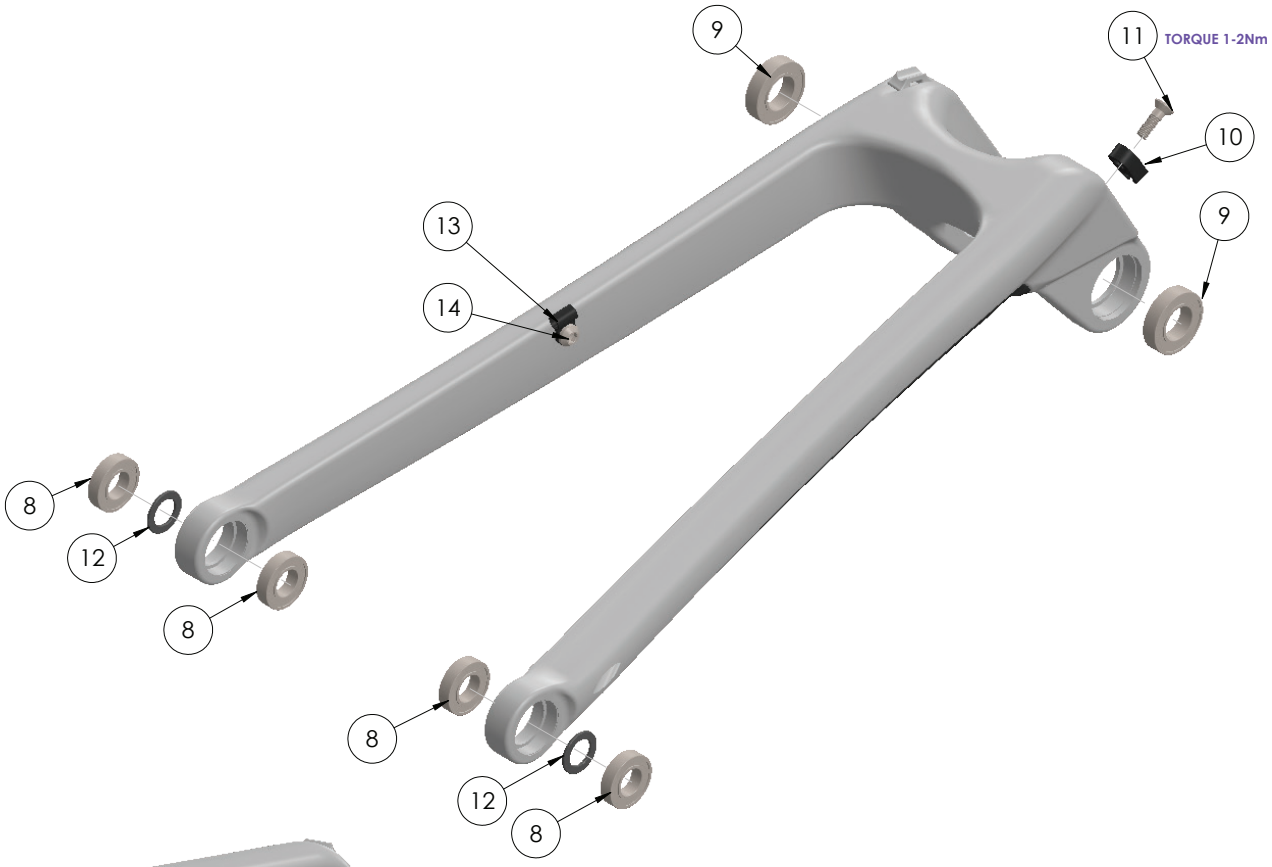


ATTENTION: APPLY LIGHT FILM OF GREASE TO BEARING BORES BEFORE INSTALLATION!

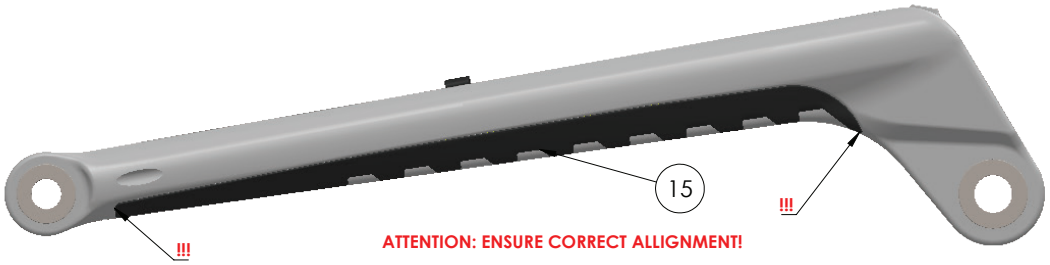


ATTENTION: ENSURE CORRECT ALLIGNMENT!

ITEM NO.	PART NO.	DESCRIPTION	QTY
8	005.001.0009	ENDURO 6901 LLU MAX BO BEARING	2

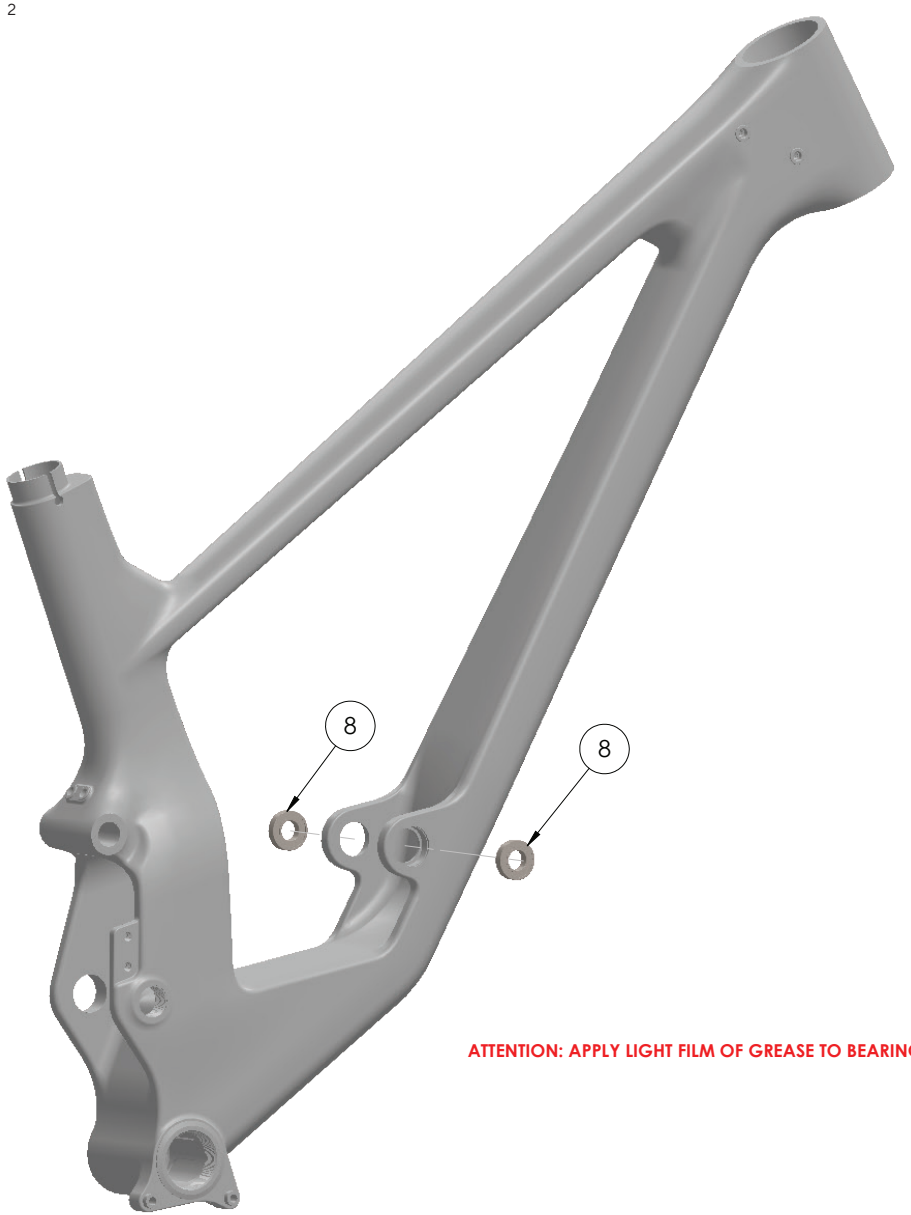


ATTENTION: APPLY LIGHT FILM OF GREASE TO BEARING BORES BEFORE INSTALLATION!

ITEM NO.	PART NO.	DESCRIPTION	QTY
16	005.001.0006	ENDURO 6903 LLU MAX BO BEARING	2
17	005.001.0002	ENDURO 6904 LLU MAX BEARING	2
18	001.001.0011	SUPERNOUGHT ROCKER LINK	1
19	002.004.0018	SPACER 17x31.5	1
20	002.004.0019	SPACER 20x37.5	1
21	002.004.0014	SPACER 17x2.25	2
22	002.004.0015	SPACER 20x3.25	2

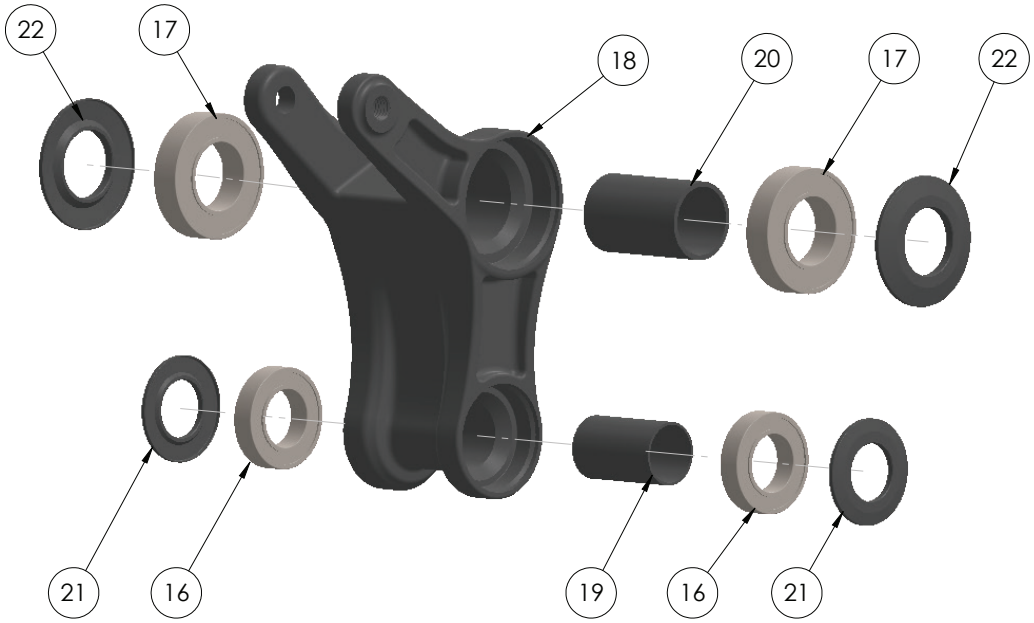


ATTENTION: APPLY LIGHT FILM OF GREASE TO BEARING BORES BEFORE INSTALLATION!

ITEM NO.	PART NO.	DESCRIPTION	QTY
23	005.001.0005	ENDURO 6902 LLU MAX BOSL BEARING	1
24	003.007.0007	RETAINING RING 28mm	1
25	003.001.0011	IDLER PULLEY 18T	1

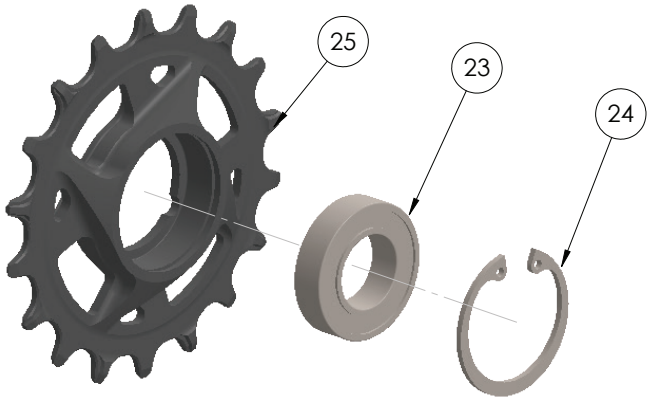


ATTENTION: APPLY LIGHT FILM OF GREASE TO BEARING BORES BEFORE INSTALLATION

ITEM NO.	PART NO.	DESCRIPTION	QTY
26	003.006.0001	SEAT CLAMP	1
27	003.007.0008	SEAT CLAMP BARREL	1
28	003.007.0005	SEAT CLAMP SCREW	1

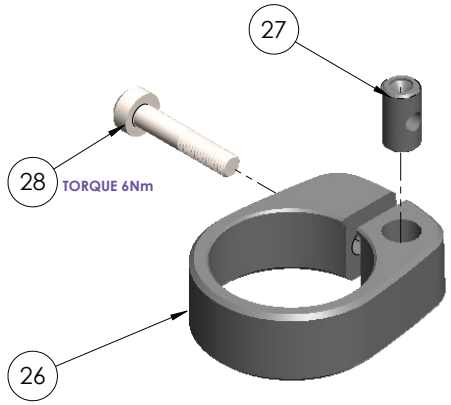


NOTE A: FASTEN THE SCREW UNTIL THE HEAD CONTACTS THE RUBBER BUMPER. THEN TIGHTEN THE SCREW CLOCKWISE ONE FULL TURN

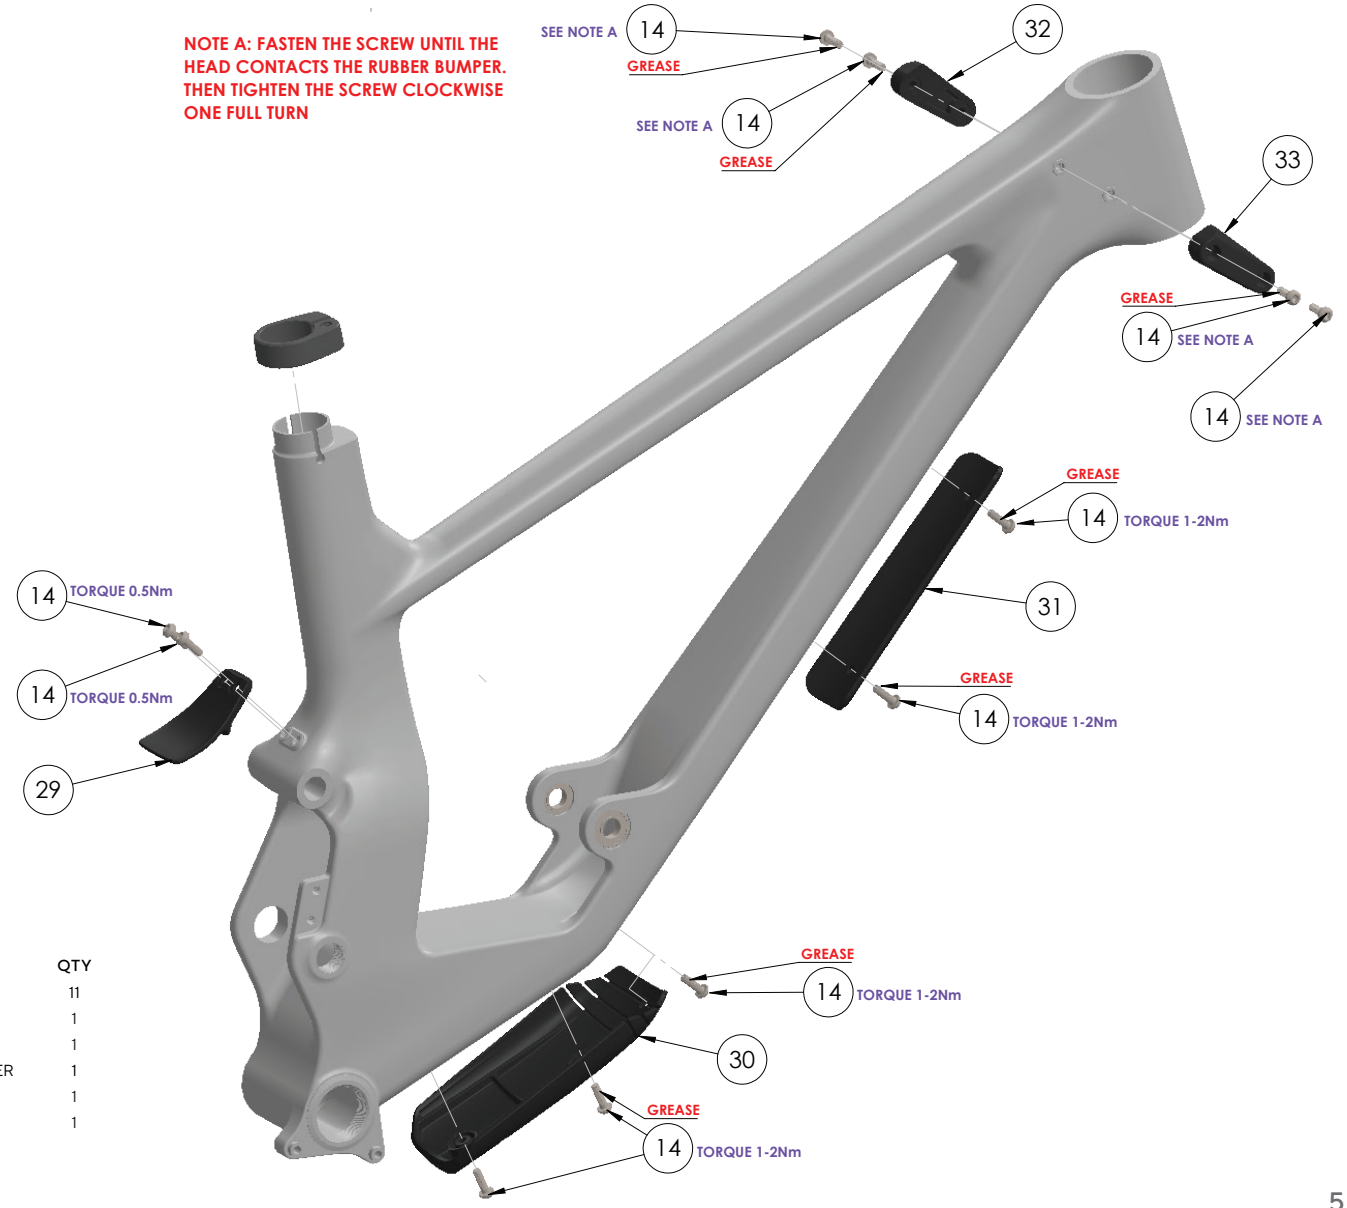


ITEM NO.	PART NO.	DESCRIPTION	QTY
14	003.007.0002	ACCESSORY SCREW	11
29	004.002.0015	SUPERNOUGHT FENDER	1
30	004.002.0016	SUPERNOUGHT DOWNTUBE PROTECTOR	1
31	004.002.0017	SUPERNOUGHT DOWNTUBE PROTECTOR UPPER	1
32	004.002.0014	SUPERNOUGHT LH BUMP STOP	1
33	004.002.0013	SUPERNOUGHT RH BUMP STOP	1


ITEM NO.	PART NO.	DESCRIPTION	QTY
34	002.001.0014	SHAFT 20x60 EXT	1
35	002.005.0002	TAPERED WASHER 20mm	1
36	002.005.0003	M6x1.6 WASHER 11mm OD	1
37	003.007.0022	M6x20 TAPER SOCKET SCREW 5mm HEX	1

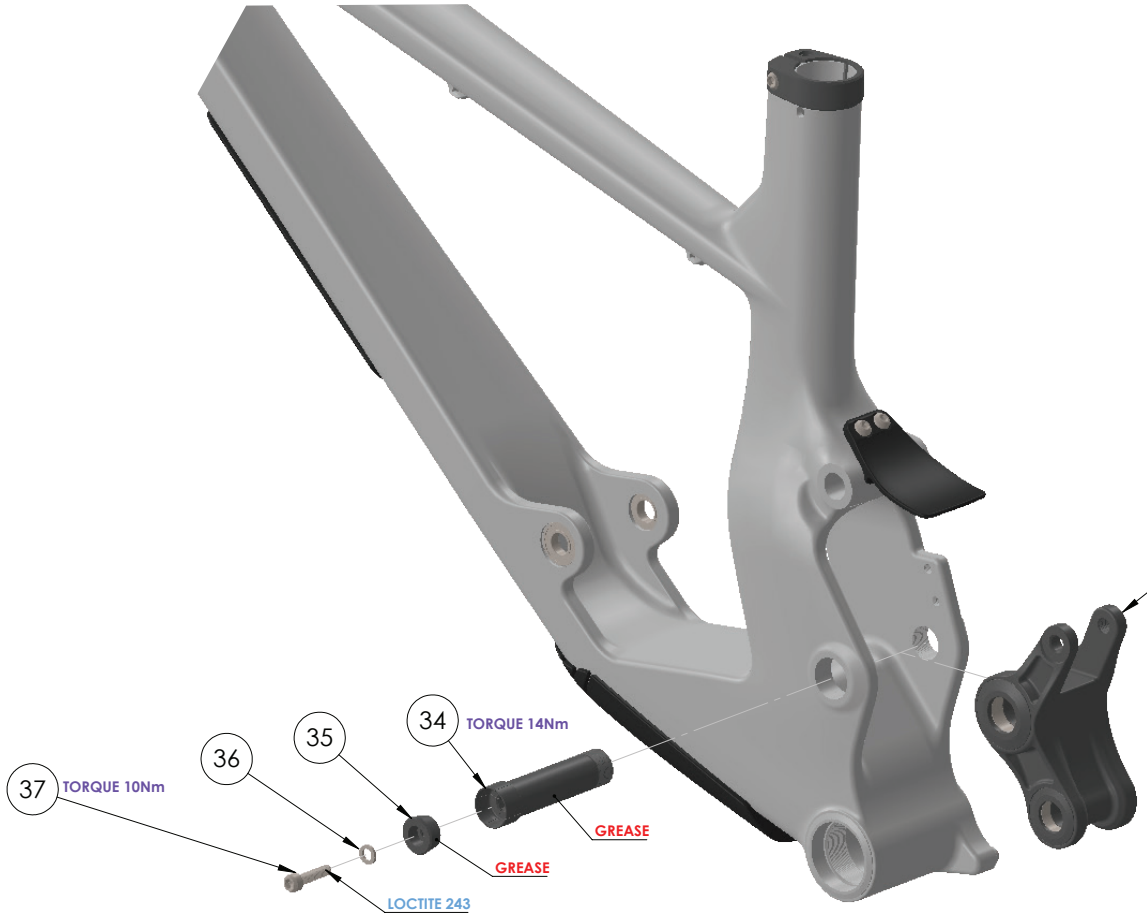



ITEM NO.	PART NO.	DESCRIPTION	QTY
36	002.005.0003	M6x1.6 WASHER 11mm OD	1
37	003.007.0022	M6x20 TAPER SOCKET SCREW 5mm HEX	1
38	002.001.0011	SHAFT 12x30	2
39	002.001.0012	SHAFT 15x82 EXT	1
40	002.001.0013	SHAFT 17x50 EXT	1
41	002.004.0017	SPACER 12x2.25	4
42	002.005.0001	TAPERED WASHER 17mm	1
43	003.004.0003	LOCKING COVER M15	1
44	002.003.0002	NUT 15x1x8	1
45	002.004.0013	SPACER 15x3	2
46	003.007.0006	M6x20 COUNTERSUNK SCREW 5mmHEX	1

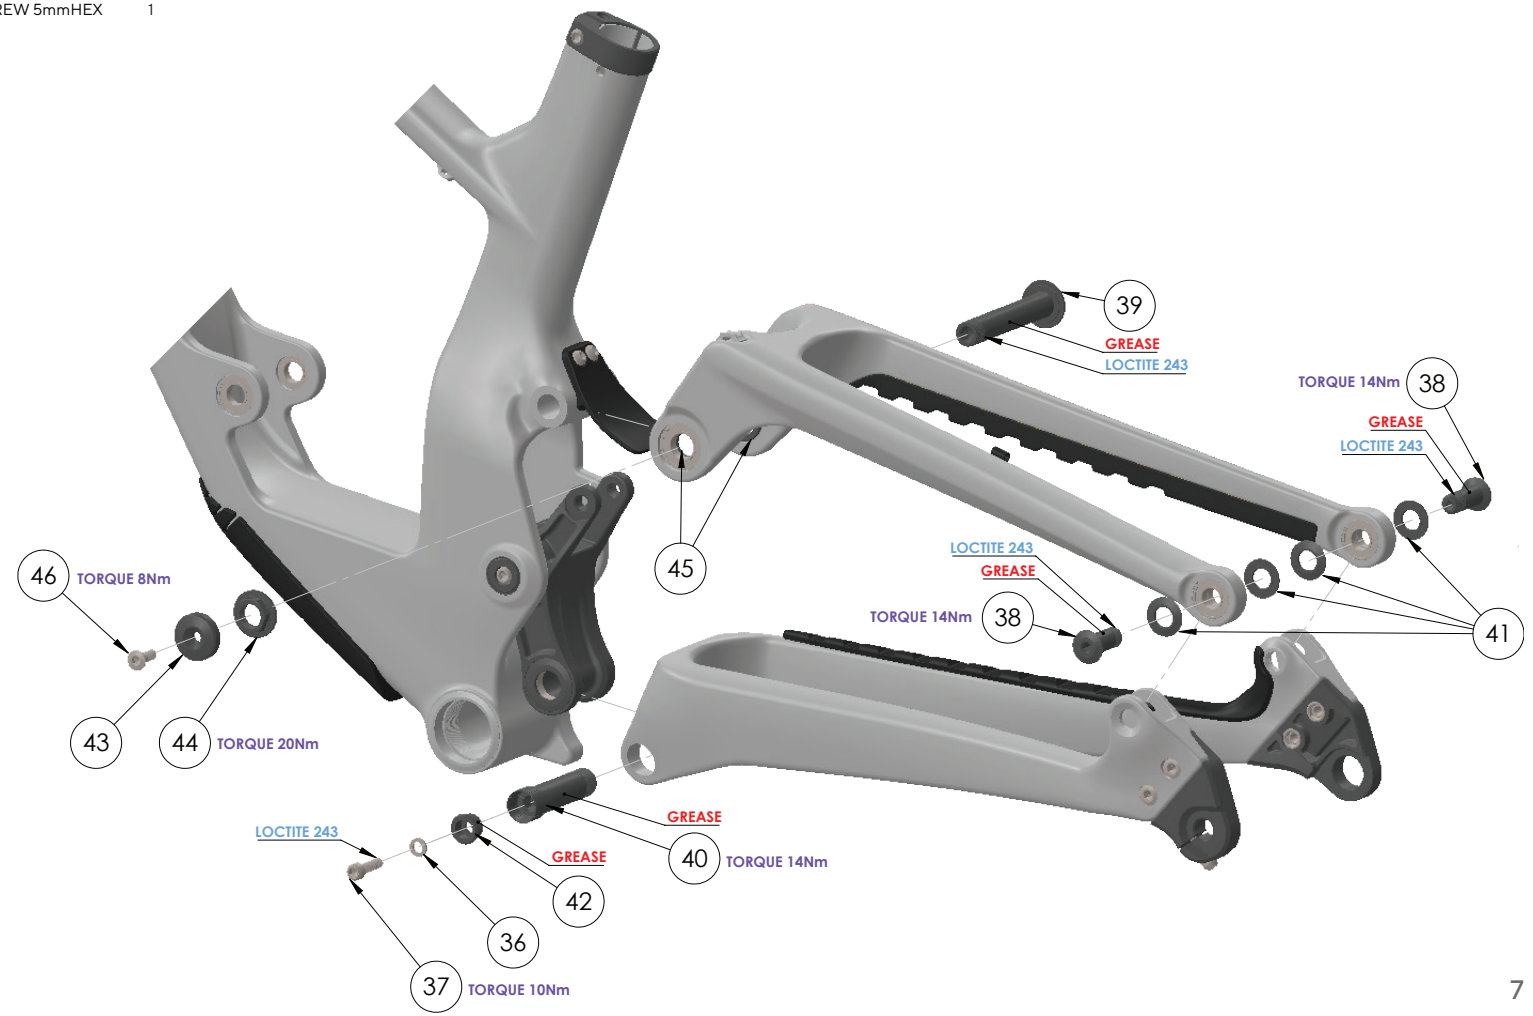


ITEM NO.	PART NO.	DESCRIPTION	QTY
46	003.007.0006	M6x20 COUNTERSUNK SCREW 5mmHEX	1
47	001.005.0004 (Alt. 001.005.0002)	BRAKE MOUNT 27.5 [0,+10,-10] 200mm (Alt. BRAKE MOUNT 29 [0,+10] 200mm)	1
48	003.007.0012	M4x10 TAPER SOCKET SCREW 4mm HEX	1
49	-	UNIVERSAL DERAILLEUR HANGER	1
50	-	SRAM MAXLE STEALTH REAR AXLE 180mm	1
51	003.001.0012	SUPERNOUGHT IDLER PULLEY MOUNT	1
52	003.001.0014	IDLER PULLEY SCREW	1
53	003.007.0009	M6x16 COUNTERSUNK SCREW 5mm HEX	2
54	004.003.0012	SUPERNOUGHT CHAIN GUIDE	1
55	003.007.0014	M5x16 LH THREAD 3mm HEX	1
56	003.007.0011	M6x25 TAPER SOCKET SCREW 5mm HEX	1

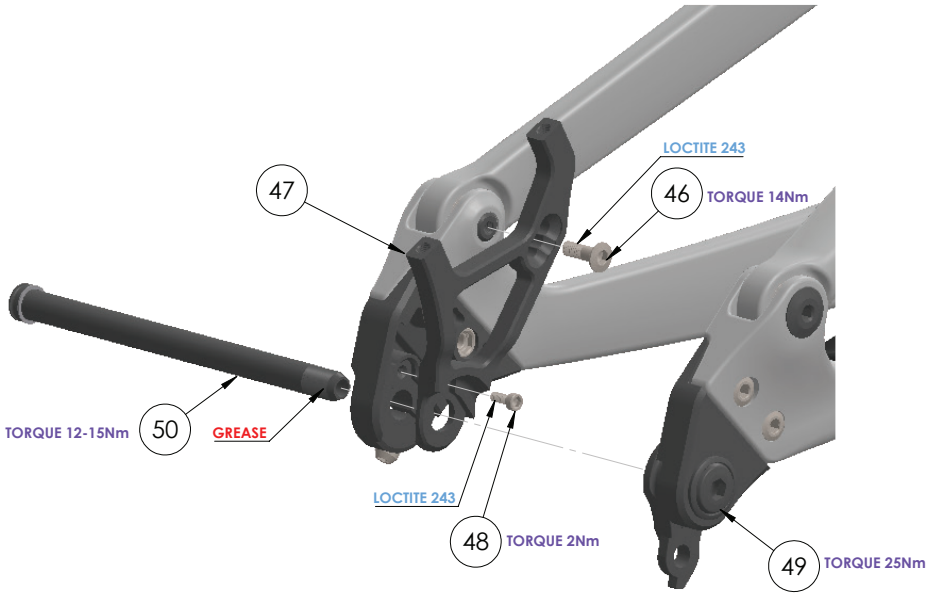

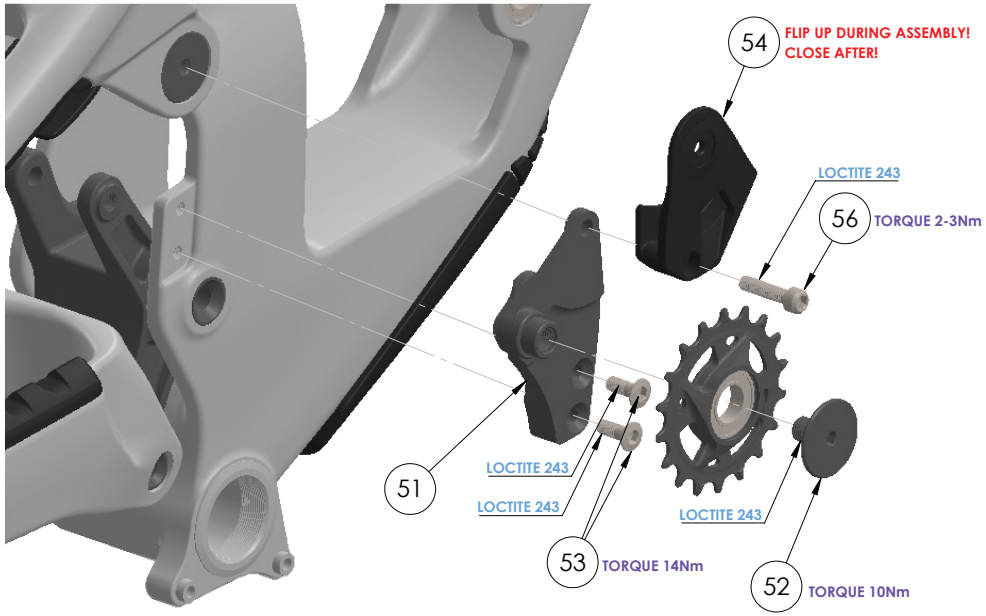


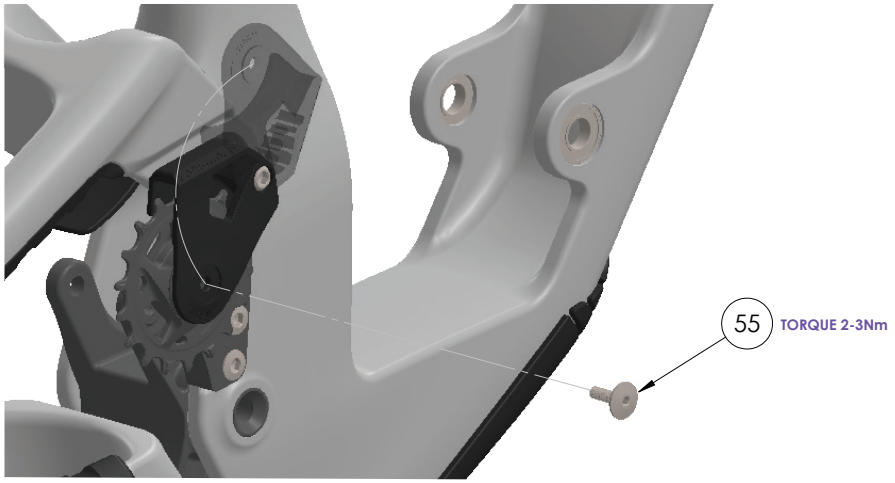

ITEM NO.	PART NO.	DESCRIPTION	QTY
57	002.002.0006	SCREW 10x1x18.5 24OD	2
58	003.007.0004	SHOCK SCREW 8x1.25x45	1
59	002.004.0010	SPACER 10x4 FLANGED TOP HAT	2

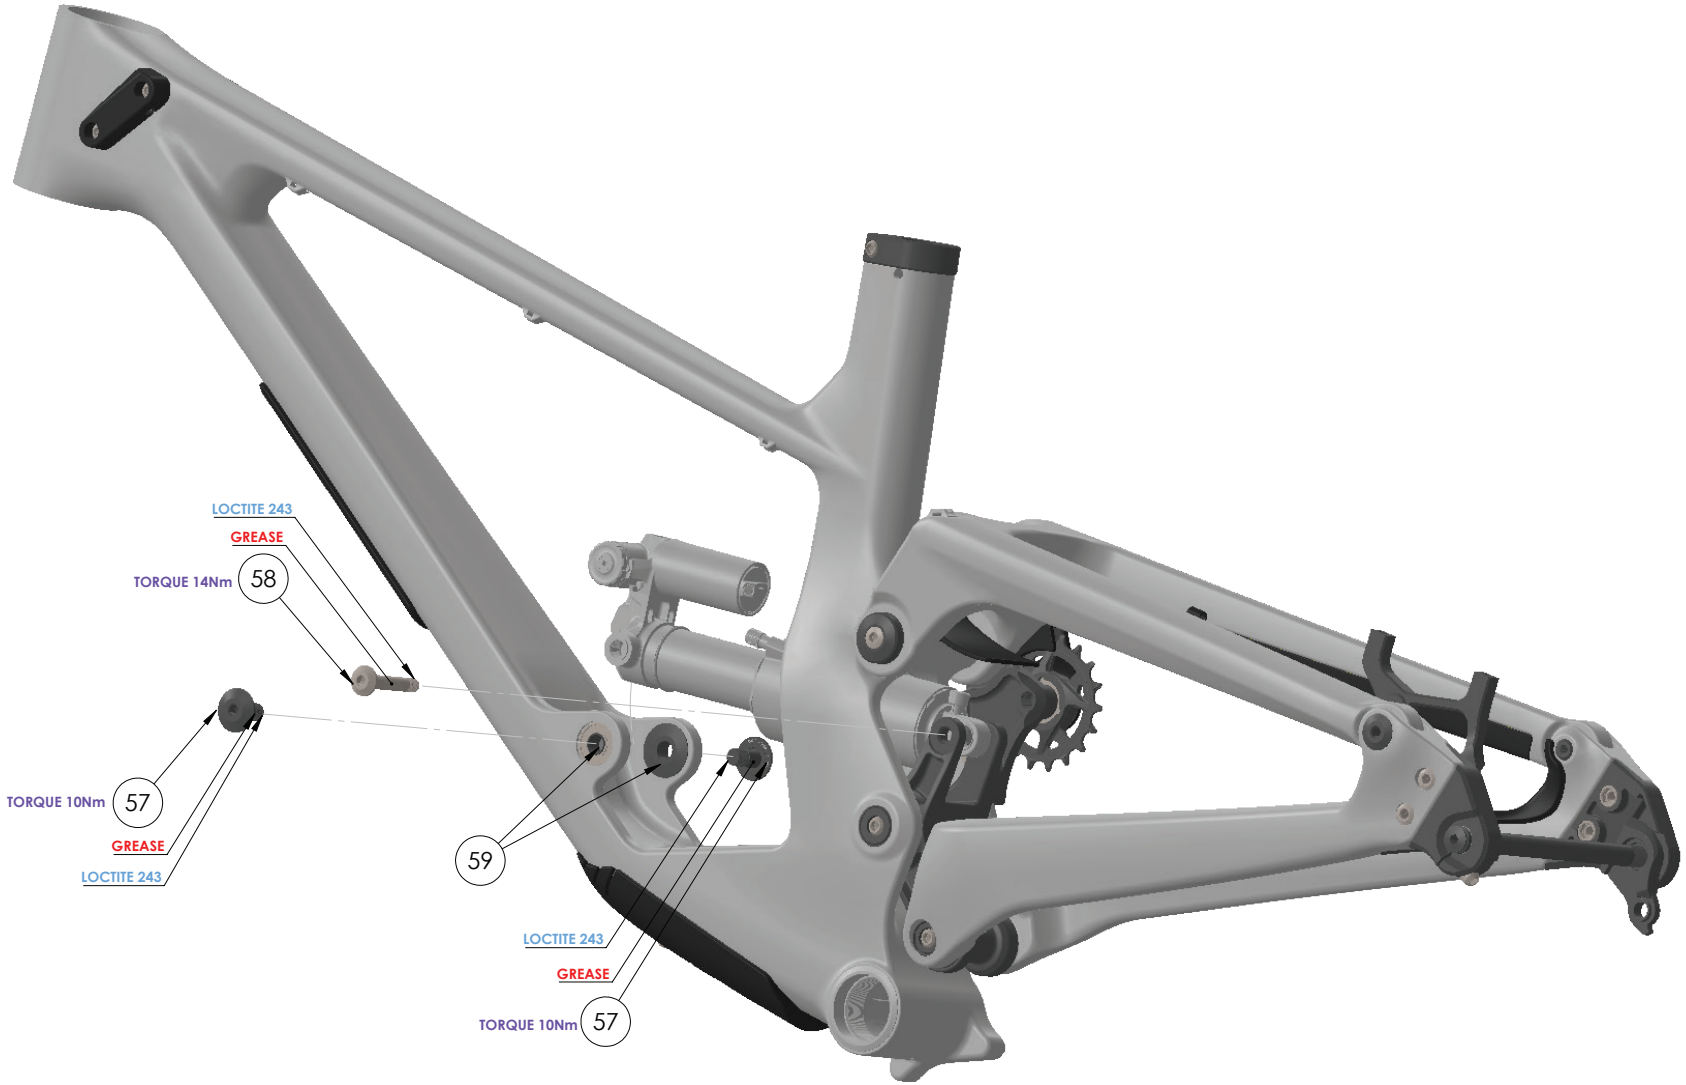

ITEM NO.	PART NO.	DESCRIPTION	QTY
60	004.002.0005	DOWNTUBE PROTECTION LOWER	1

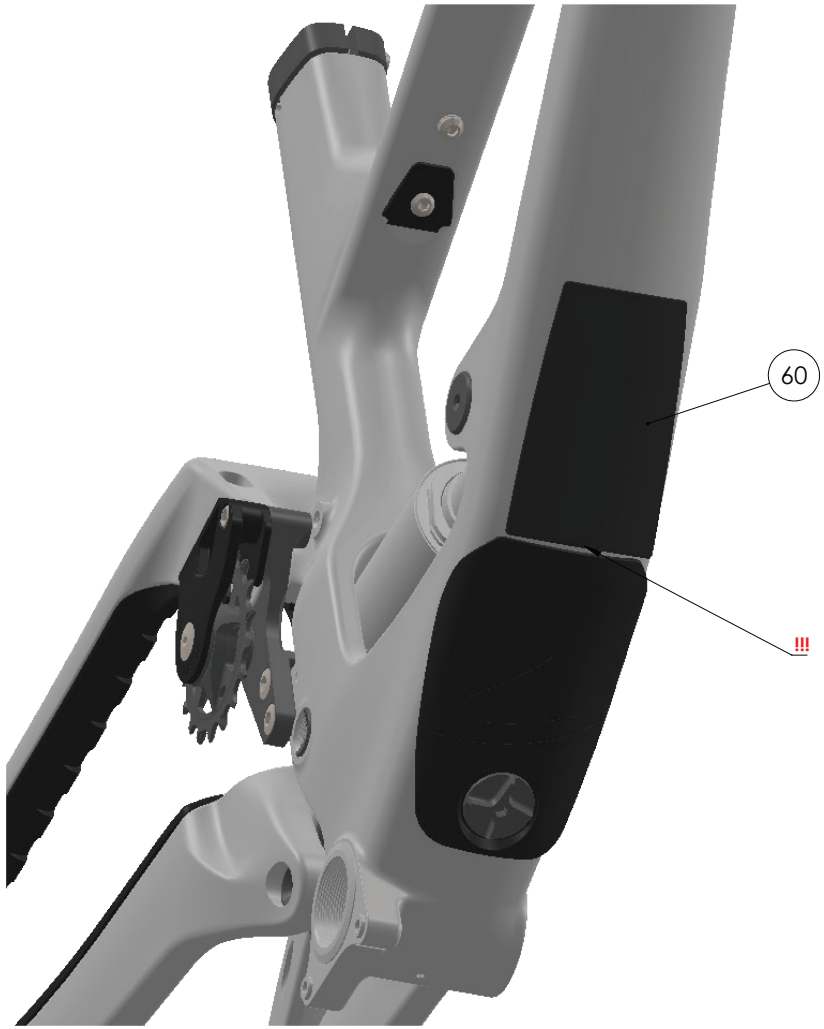

ATTENTION: ENSURE SURFACE IS CLEAN AND FREE FROM GREASE!

ATTENTION: ENSURE CORRECT ALLIGNMENT!